

## DVR CD RECORDING HELP

1. After creating your video file as outlined in the users manual you will need to navigate to the drive and directory your video file was created in. This is provided in the “Save Directory” section of the “AVI SAVING” screen where you created the video file.
2. Now you will need to use Windows Explorer to find the video file. To do this you will press the Windows key (Figure 1). This key is located on both the lower left and lower right of the keyboard in-between the Ctrl and Alt keys.



Fig. 1

3. Once you press this button the Windows Start Menu will be displayed. Left mouse click on “My Computer” and then navigate to the correct drive (For example by default the Save Directory is [D:\](#) which is Local Disk D in My Computer.) you saved your video file to.
4. Once you are in the correct drive and directory you will find your video file. It will be named Cam0X[2006xxxxx-xxxxx] where the X represents the number of the camera and the x's inside of the brackets represent the date and time of the start and stop points of your recording.
5. Right mouse click on this file and choose “Send-To” and then “DVD-RW Drive” or “CD-RW drive” depending on which type of drive you have in your system. A “pop-up” notice stating “You have files waiting to be written to CD” will be displayed in the lower right hand side of your screen by the time.
6. Left mouse click inside of this pop-up notice and next your screen will display the CD writing window. Here you will see the file you have waiting to be written to CD and just to the left you will see an area “CD Writing Tasks”. Left click on the top choice “Write these files to CD” and follow the prompts. Your files will now be written to CD.